 



INTRODUCTION

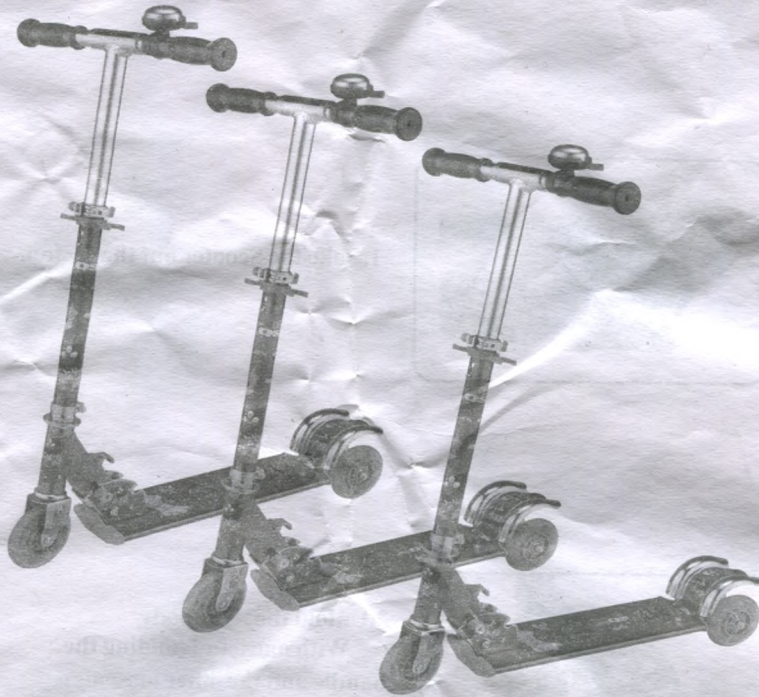


Thanks for purchasing this scooter!

1. This specification include warning, fixment and conservation.
2. Please read this specification clearly before fix and use.

 A. Fix this scooter

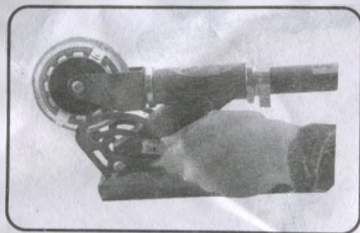

1. Take the Scooter out the carton.

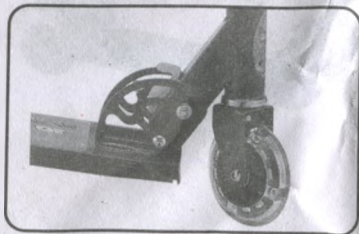


2. Unfold the mainbody
With one hand holding the handle and the other loosening the screw nut, push the holder ahead and tighten it with fixing screw nut.




3. Fix handle

Cling the handle,press the spring,in-
sert the handle in the T shape bar,make
the spring into the hole in the bar,
counter press when folding.

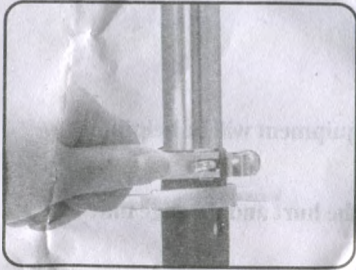

4. Adjust the height of handle.

Adjust T shape bar,then lock it
tightly.

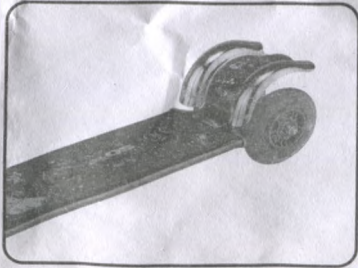

5. Brake

This scooter have rear brakc. When
it is tramped down,scooter stop.
remove your foot,it recover.

After fixation, please check every part, to prevent dull switch and unlocked.

7. Conservation

Cleaning scooter timely, after use, fold it and clean it, keep it in carton, keep it away from corrosive material.

B. Warning

1. Not slide on slope, valley and ice ground.
2. Not slide on automobile road.
3. It is not used by two people.
4. It is not for acrobatics performance.
5. Not to slide in foggy day and evening
6. Not to slide after drinking.
7. Use it cautiously, use safety protecting equipment will be helpful.
8. Please use parts provided by supplier.
9. Manufacturer will not be responsible for the hurt and damage may caused by using this scooter.